BLUE SEA SYSTEMS®

Instructions

Sure Eject™

120V AC Shore Power Disconnect

7850 & 7850001 (15A) / 7851 & 7851001 (20A)

Automatic AC disconnect ejects power cord upon ignition to prevent damage

Features

- · Motor driven design ensures years of reliable operation
- The ejection piston is self-recessing, with no cocking required
- Keyed plug design allows for easy insertion
- · Anti-arcing design on insertion and ejection
- LED indicates the presence of AC power and ejection alerts
- Automatically attempts additional ejections if needed
- · Compatible with existing 15A and 20A connectors in the station
- Standard mounting holes for easy retrofit
- Connectors included: 7840 (15A) or 7841 (20A)
- Label kit included in Accessory pack
- Weather-resistant boot included
- Yellow cover 7820 included with 7850 & 7851
- Covers available: 7820 Yellow, 7821 Red, 7822 Black, 7823 White, 7824 Blue, 7825 Gray

Specifications

 Operating Voltage Range
 8V-16V DC

 Nominal Voltage
 120V AC

 DC Current
 Static: < 5mA</td>

 AC On: < 50mA</td>
 Ejection: 7A max. / 5sec.

Installation Screws #8-32 (Max. Torque: 11 in-lb)
Termination Screws #8-32 (Max. Torque: 16 in-lb)


Temperature Range -40°C to 55°C

Accessory packs include:

(1) Water-resistant dielectric grease packet (2 gram)
Periodically apply a small amount of dielectric grease to protect and lubricate
120V AC Connector (female) or Ejection Unit (male) electrical contacts.

- (1) Label kit (5 labels)
- (4) Mounting screw packs (4 packs, 4 screws each)
- (1) Termination screw (#8-32 x 5/16")
- (1) Three position plug (3.5mm)
- (3) Nylon insulated ring terminals (12-10 AWG)

Dimension Drawing

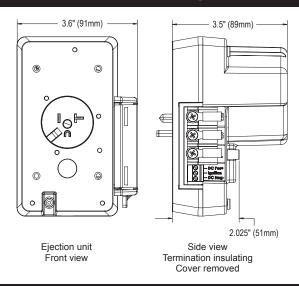


LED Indication

- Green AC connector inserted and AC power properly passing through the Sure Eject and supplying power to the vehicle
- Solid Red AC connector inserted, no power passing through SureEject
- · Red Flash Connector jam. SureEject is continuing ejection attempts
- · LED Off Connector not fully inserted or DC power not connected to SureEject

Blue Sea Systems Inc. 4600 Ryzex Way Bellingham, WA 98226 USA p 360.738.8230 www.bluesea.com

980026230 Rev. 006

Wiring Diagram

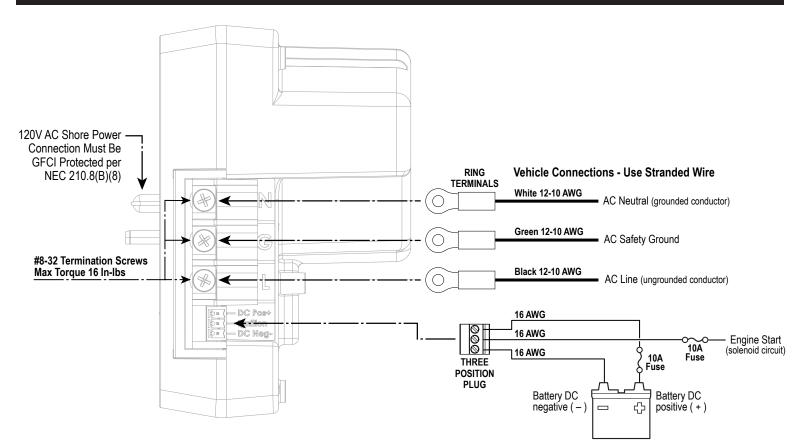

Installation and Mounting Diagram

Item	Description
1	Installation Screws #8-32 (4 packs included)
2	Cover
3	Gasket* Note: Qty. 2 included
4	Vehicle wall / mounting surface
5	Ejection unit
6	AC/DC termination cover
7	Connector 120V AC
8	Weather-resistant boot


⚠ CAUTION

- Sure Eject must be mounted vertically (+/- 15°) as shown, and in a nominally dry and protected location.
- 2. Connected wiring must include appropriate drip and service loops.
- If ejection unit (Item 5) is mounted externally or exposed to weather elements, installation with weather-resistant boot (included) is recommended.
 - a. Route wires through hole in cover.
 - b. Slide weather-resistant boot over ejection unit, wires exit at bottom.
 - c. Install Sure Eject.
 - d. Use heat gun to shrink cover in place before or after installation.

Visit bluesea.com for more information.

ded. #8-32 Installation Screws Max. Torque 11 In-lbs

Cutout Template

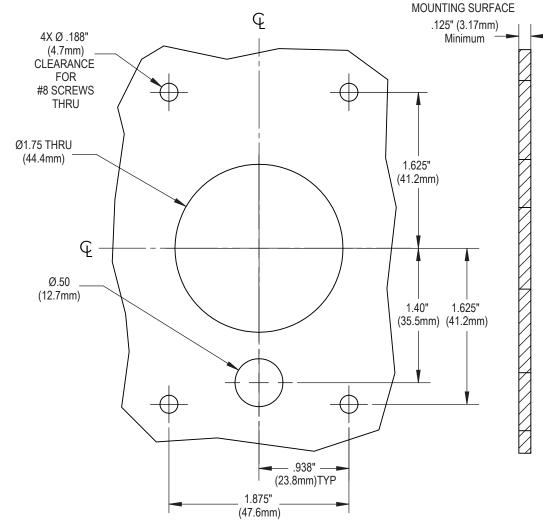

A CAUTION

Warranty void if incorrect screw length is used.

Do not use screws that will penetrate the Ejection Unit's mounting holes deeper than 3/8".

If vehicle wall / mounting surface material is less than 1/8" thick, shim with extra 1/16" thick gasket (included).

NOTE: Four screw packs are included. Choose the appropriate screw length for your Vehicle Wall / Mounting Surface Thickness. (see table below).

Vehicle Wall / Mounting Surface Thickness	Screw Length	Screw Pack #
1/8" (3.2mm)	#8-32 x 1.0" (1")	1
1/4" (6.4mm)	#8-32 x 1.125" (1-1/8")	2
3/8" (9.5mm)	#8-32 x 1.25" (1-1/4")	3
1/2" (13mm)	#8-32 x 1.375" (1-3/8")	4