



#### **Features**

## HIGH CURRENT CARRY AND HIGH VOLTAGE

Inert gas filled arc chamber suitable for high voltage switching

## **COMPACT STRUCTURE, LOW NOISE**

Small, low-profile design with low noise while carrying or switching loads

## **COIL ECONOMIZER**

Economized coil for low power consumption

#### SAFE FOR EXPLOSIVE ENVIRONMENTS

No arc leakage due to a hermetically sealed design

## **HIGH RELIABILITY DESIGN**

Hermetic sealing creates a stable environment for high voltage switching

#### **VARIOUS APPLICATIONS**


Pre-charge contactor, battery disconnect, EV charging, energy storage systems, photovoltaics, power control, circuit protection and much more

# **Sealing Type: Ceramic**




## **Certification Information**

- 1. Meet RoHS (2011/65/EU)
- 2. CE certified

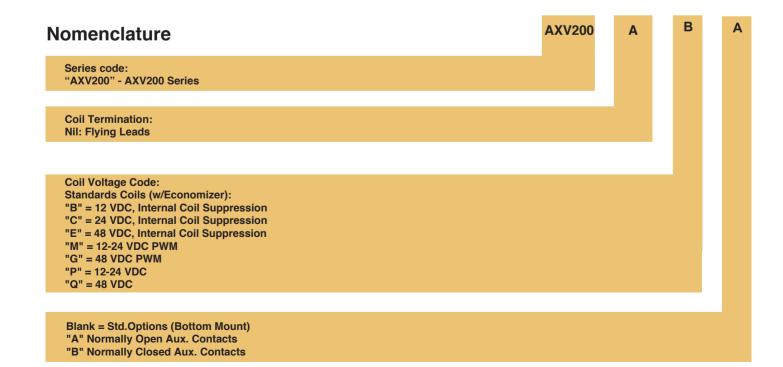



#### **Product Data Sheet**

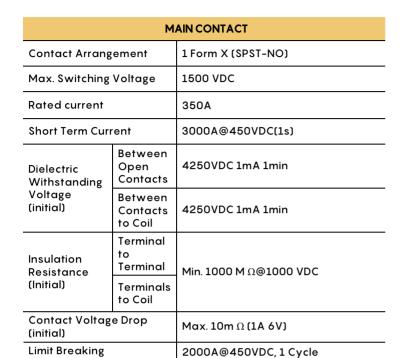

OPERATE / RELEASE TIME		
Operate Time (includes bounce)	30ms Max. @20°C	
Release Time	12ms Max. @20°C	


ENVIRONMENTAL DATA		
Shock	Functional	196m/s² Sine half-wave pulse
	Destructive	490m/s² Sine half-wave pulse
Operating Temperature		-40 to +85°C
Humidity		5% to 85%RH
Weight		1.014 Lb (460g)


EXPECTED LIFE		
Electrical Endurance (Break only) 250A@1000VDC	1000 Cycle	
Electrical Endurance (Make/ Break) 100A@1000VDC	50 Cycle	
Electrical Endurance (Make/ Break) 50A@1000VDC	6000 Cycle	
Mechanical Life	200,000 Cycles	

AUX. CONTACT		
Aux Contact Arrangement	1 Form A	
Aux Contact Current Max	2A@30VDC/3A@125VAC	
Aux Contact Current Min	100mA@8V	
Aux. Contact Resistance Max.	0.417ohms@30VDC/ 0.150ohms@125VAC	

# Auxiliary contacts

# **Power Contacts**

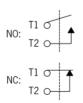

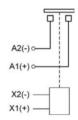


# Note:

- 1. Do not meet dielectric & IR after the test.
- 2. ON:OFF= 1s:9s.
- The ambient environment of application should not cause any dewing or icing inside the relay. Otherwise, the relay may fail to work consequently.




#### **Product Data Sheet**

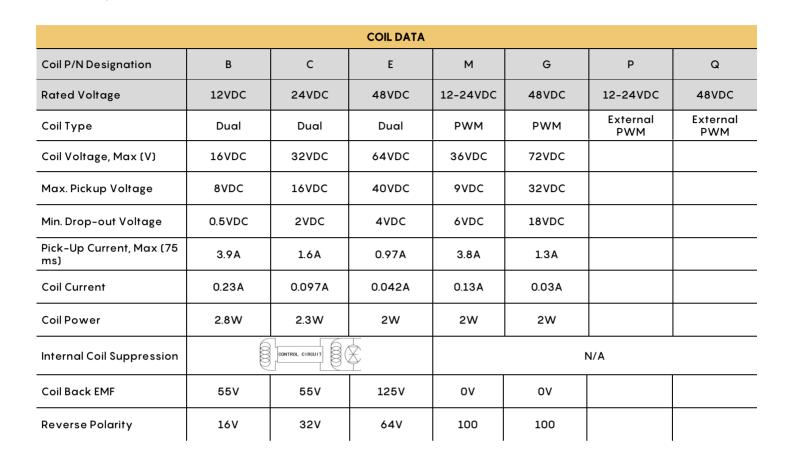


# **Power Switching Cycles**

## DC POWER SWITCHING CYCLES

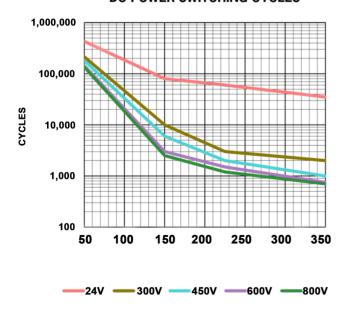

# **Current Carry Curve vs Time (@85°C)**

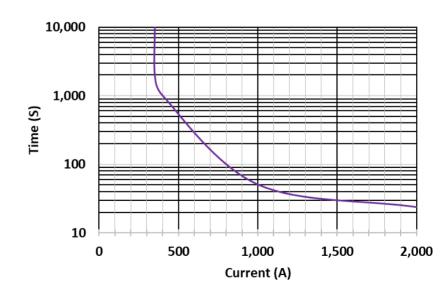





#### **Product Data Sheet**

# **Outline Dimensions: inches (mm)**

# Auxiliary Leads

T1=White Lead 22AWG
 T2=White Lead 22AWG

## Coil Leads

X1=Red Lead(+)X2=Black Lead(-)


# Upright Mounting


M5 or No. 10 Screws
 Torque 1.7-4 Nm [15-35 in-lb]

# Upright Mount Power Connection

 Silver plated Copper M8x1.25 stud M8x1.25 flanged nut Torque 10 Nm [90 in-lb] max

# **Upright Mounting**

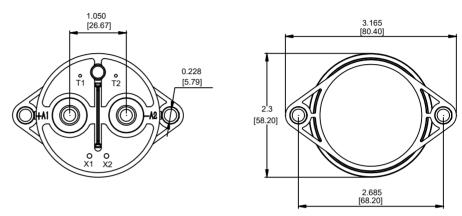

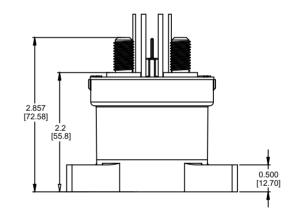







# **Application Notes**

- To prevent loosening, split washers should be used whenever the contactor is installed. All terminals or conductors must directly contact the contactor's main terminals. Please control the tightening torque of each part within the specified range in the table below. If the torque exceeds the recommended range, it may cause damage to the sealed cavity and thread damage.
  - Contact torque: (M8) 80-100 lb. in. (8.8 11 N.m)
  - Mounting torque: 15 30 lb. in. (1.7 3.3 N.m) Max.
- 2. Products with a coil economizer are already equipped with back EMF circuits, so there is no need to use surge protectors.
- 3. Avoid installing the contactor in a robust magnetic field environment (near transformers or magnets) and placing the contactor near objects with heat radiation.
- 4. When continuous current is applied to the relay contacts, the coil is turned on immediately after the power is cut off. At this time, as the coil's temperature increases, the coil's resistance will also increase, which will increase the pull-in voltage of the product, which may result in exceeding the rated pull-in voltage. In this case, the following measures should be taken to reduce the load current: limit the continuous power-on time or use a coil voltage higher than the rated pull-in voltage.
- 5. When the voltage is applied to products with a coil economizer, the circuit will automatically switch to the holding voltage about 100ms later. Please do not repeat the on-off operation during this period, or the coil economizer of the contactor may be damaged.
- 6. When the voltage applied to the coil exceeds the maximum allowable applied voltage, the coil temperature may rise, leading to coil damage and interlayer short circuit.
  The rated values in the contact parameters are values for resistive load. When using an inductive load with L / R > 1ms. Please connect a surge current protection device to the inductive load in parallel. If measures are taken, the electrical life may be maintained, and the continuity may be suitable. Please consider sufficient margin space in the design.
- 7. Coil drive power must be greater than coil power, or it will reduce performance capability.
- 8. Please do not allow debris and oil to adhere to the main terminals; make sure that the central terminals are in reliable contact with the load conductor; otherwise, the temperature rise of the terminal/conductor connection may be too high due to excessive contact resistance.
- 9. The load conductor must have the corresponding current load capacity and heat dissipation capacity (it is recommended to use a copper bar with a 50mm2) to prevent overheating and affecting the life of the contactor.
- 10. Determining the performance parameters of contactors in each application is impossible. Therefore, customers should choose the products according to their conditions of use. If in doubt, contact Altran. The customer will be responsible for validating that the products meet their application.
- 11. This device does not have silver-plated main terminals and due to various environmental conditions an oxide can form and degrade the electrical performance of the device. Terminal cleaning sticks, designed to remove this oxide, are available upon request.
- 12. Do not use if dropped.
- 13. Altran reserves the right to make product changes as needed. Customers should reconfirm the specification's contents or ask us to supply a new specification if necessary.

Page |5 Rev D - 29Aug2024